


VII Characteristics


$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

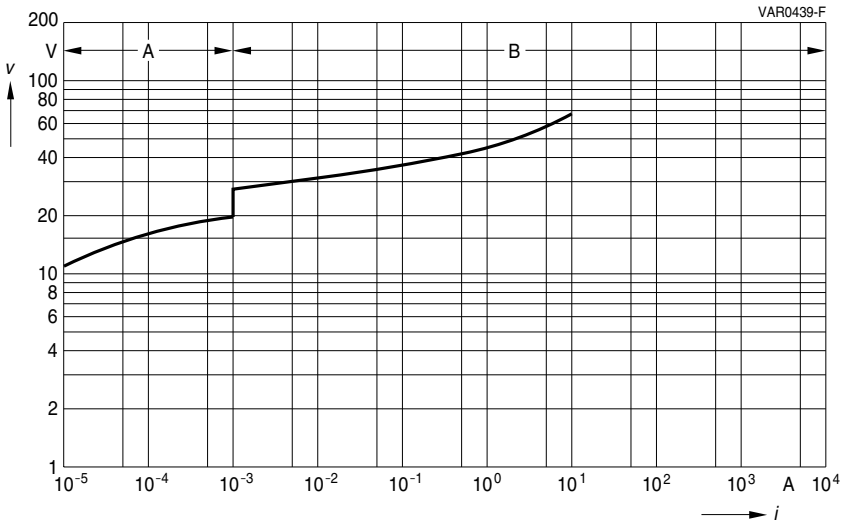

SIOV-CT/CN0402L14G(K2)

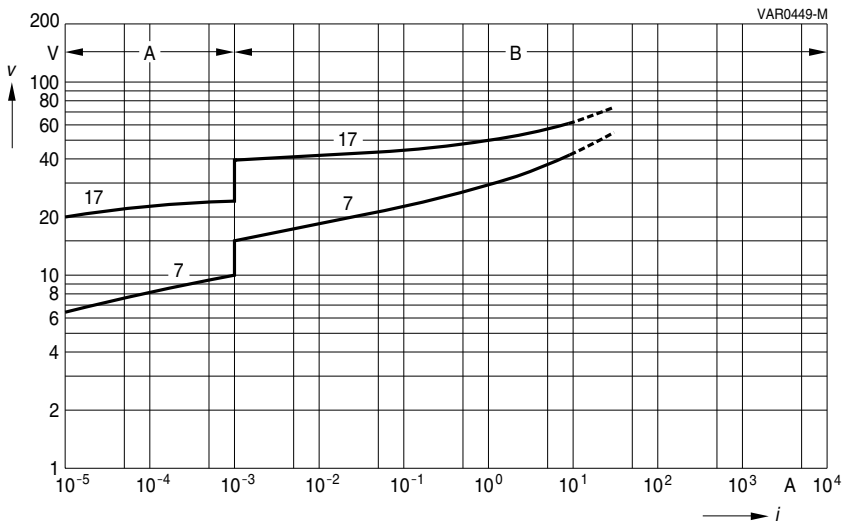

SIOV-CA06P4M7GK2
SIOV-CA06P4S17ALCGK2

SIOV-CA05P4S17ALCGK2
SIOV-CA04P2S17ALCGK2


VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

} for worst-case varistor tolerances

VAR0447-W

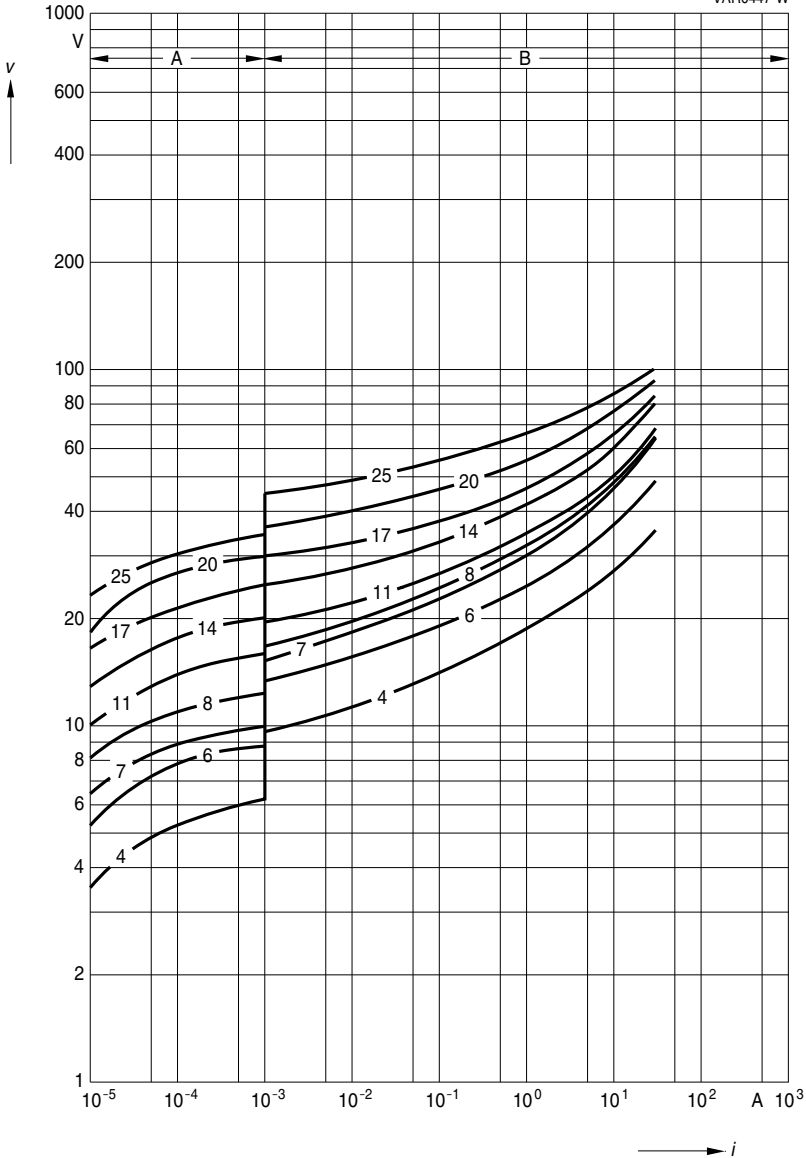

SIOV-CT/CN0603M4G ... K25G


SIOV-CT/CN0603K17LCG

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
B = Protection level

VAR0455-N

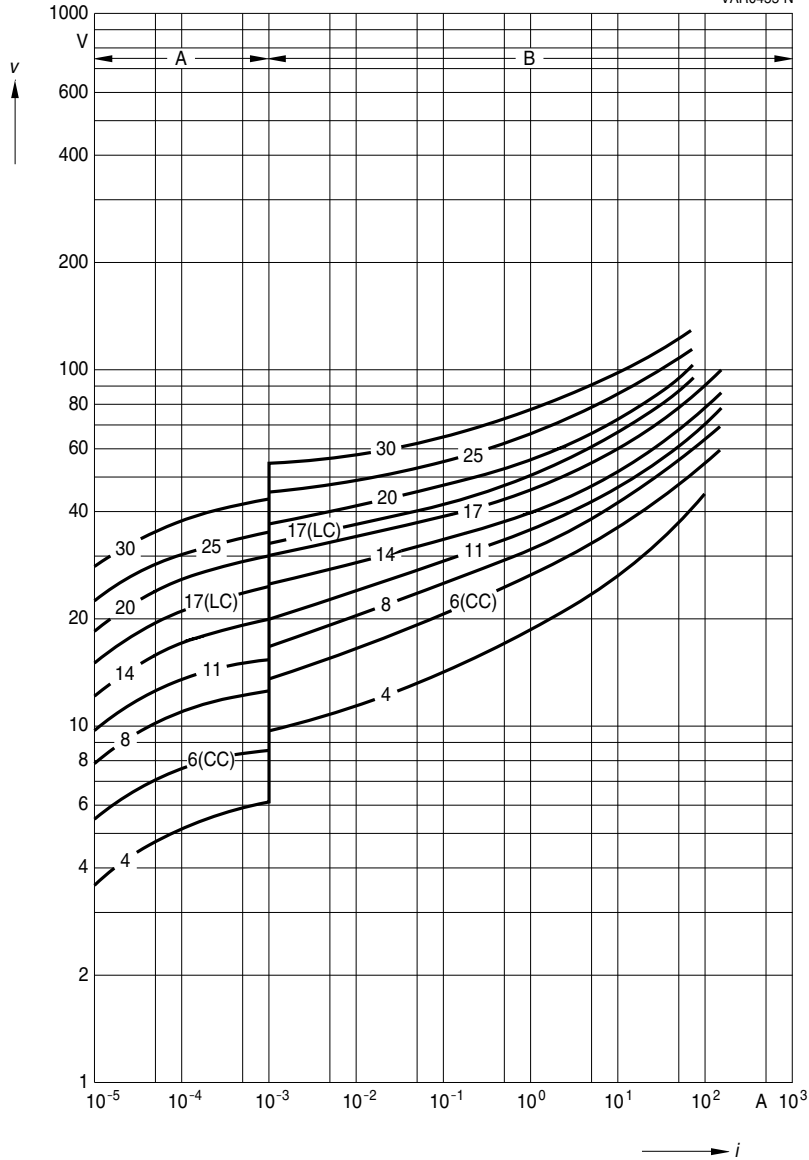

SIOV-CT/CN0805M4G ... K30G

SIOV-CT/CN0805K17LCG


SIOV-CT/CN0805M6CCG

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

} for worst-case varistor tolerances

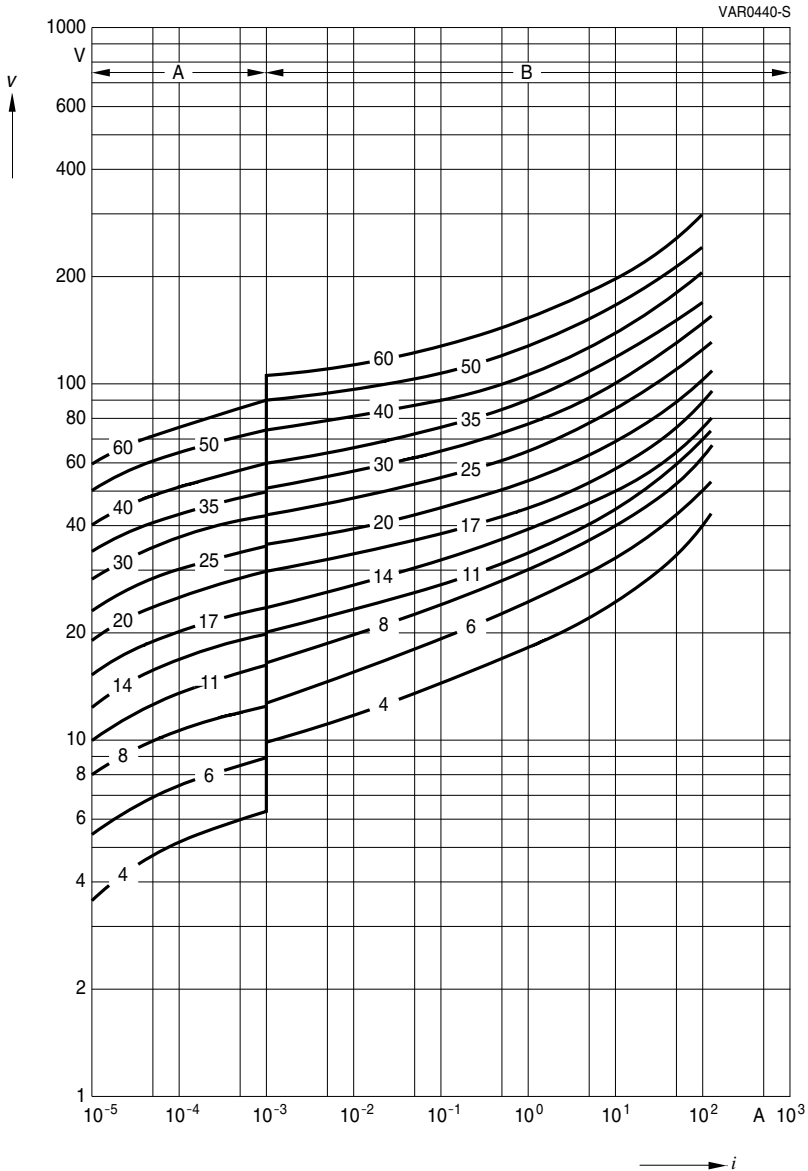


SIOV-CT/CN1206M4G ... K60G

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

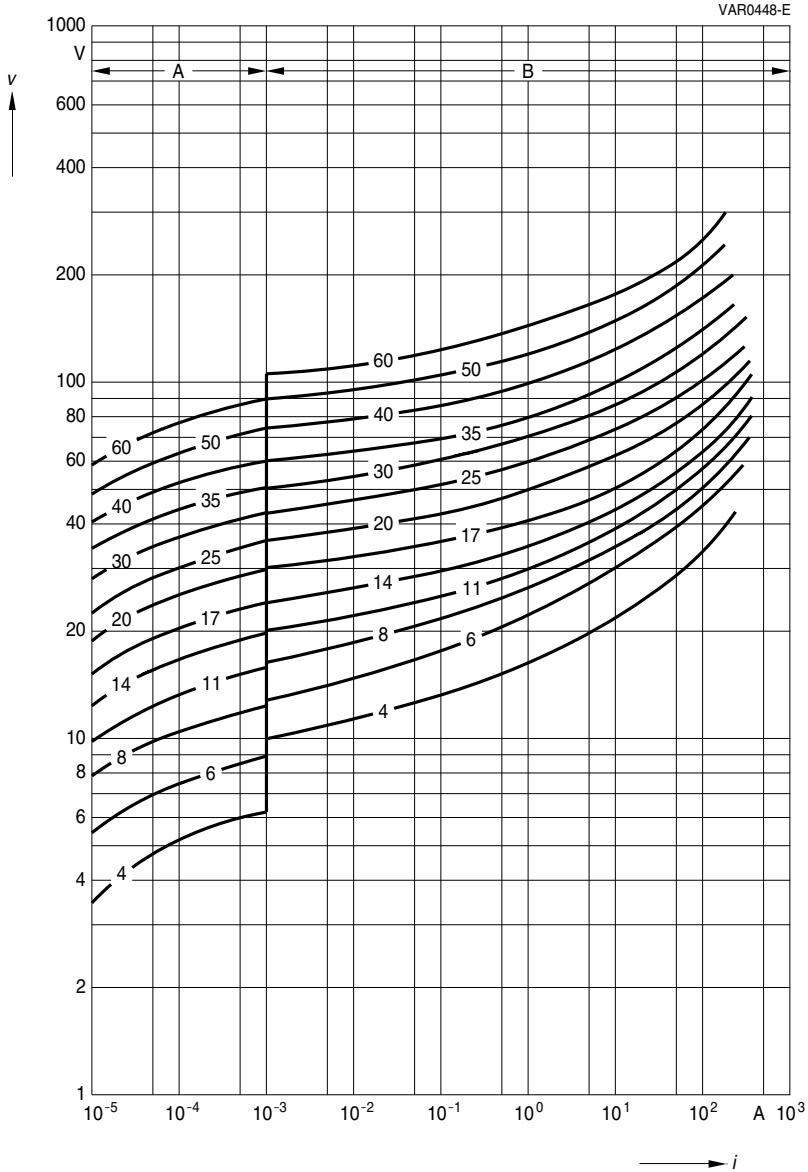


SIOV-CT/CN1210M4G ... K60G

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

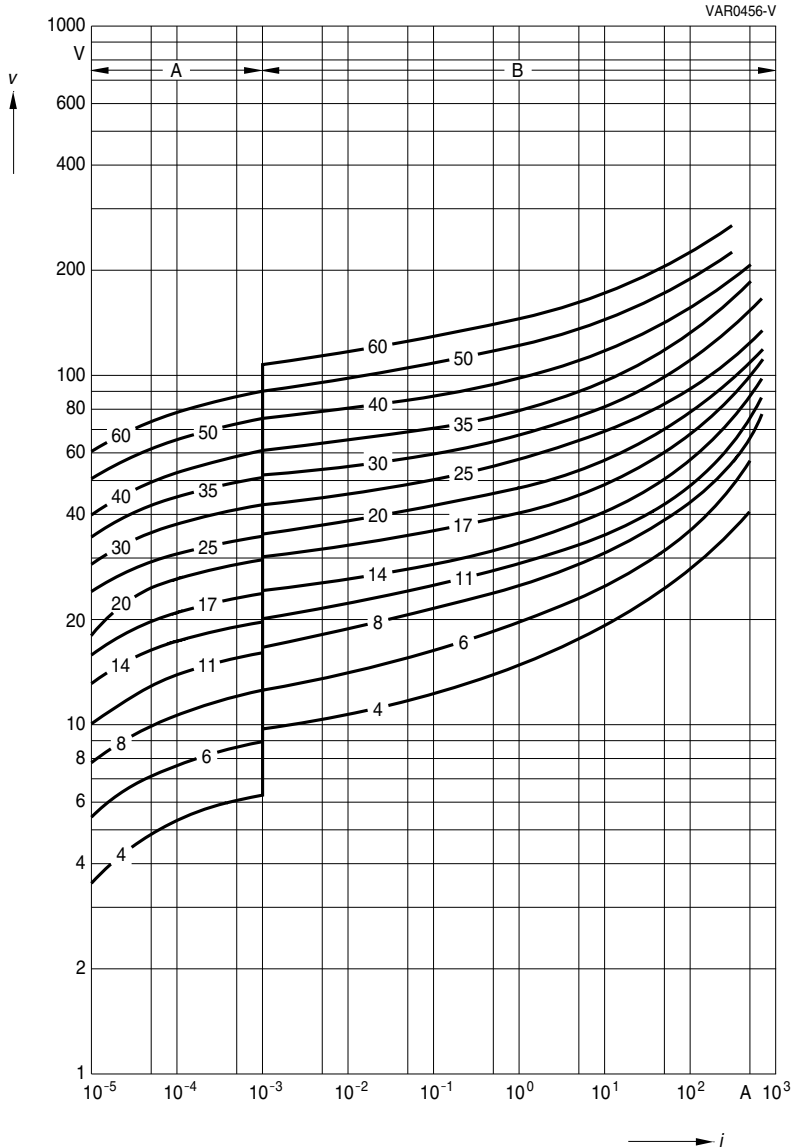


SIOV-CT/CN1812M4G ... K60G
 SHCV-SR1K20M ... X/Z $\hat{=}$ 1812

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current B = Protection level

} for worst-case varistor tolerances

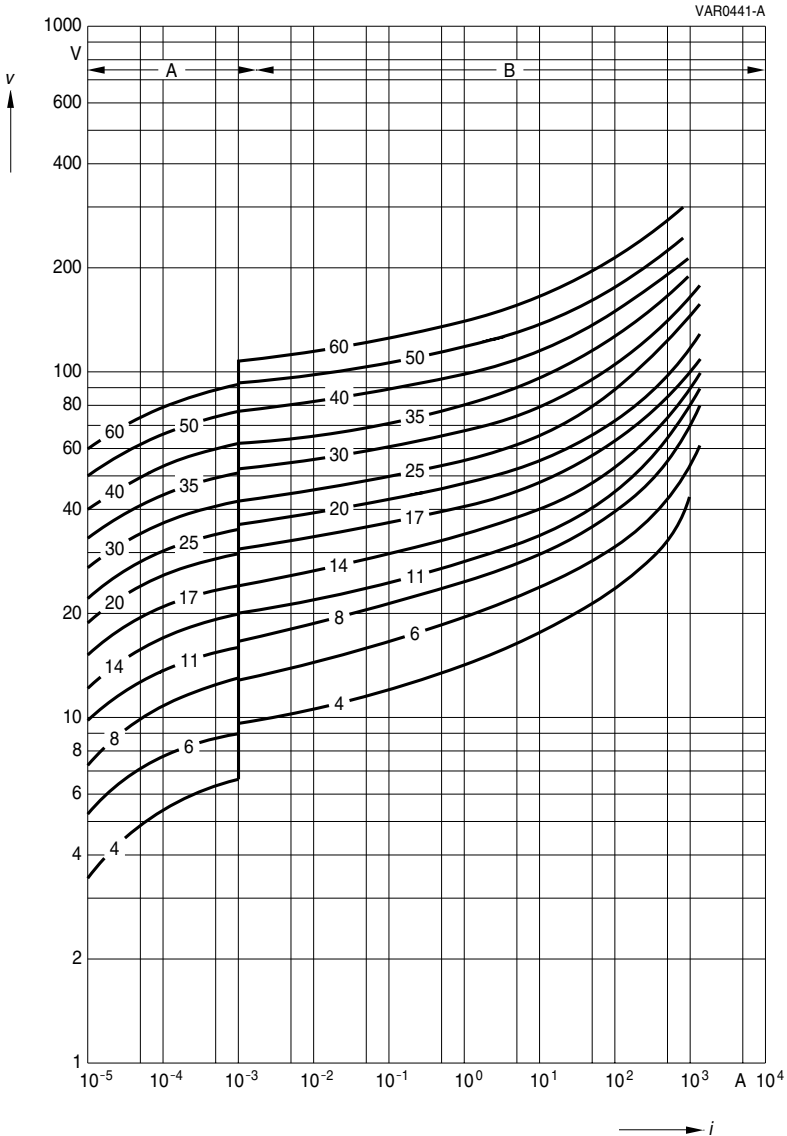

SIOV-CT/CN2220M4G ... K60G
 SIOV-CT/CN2220K25G ... K30AUTO(E2)G(2)


SHCV-SR2K20M ... X/Z $\hat{=}$ 2220

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

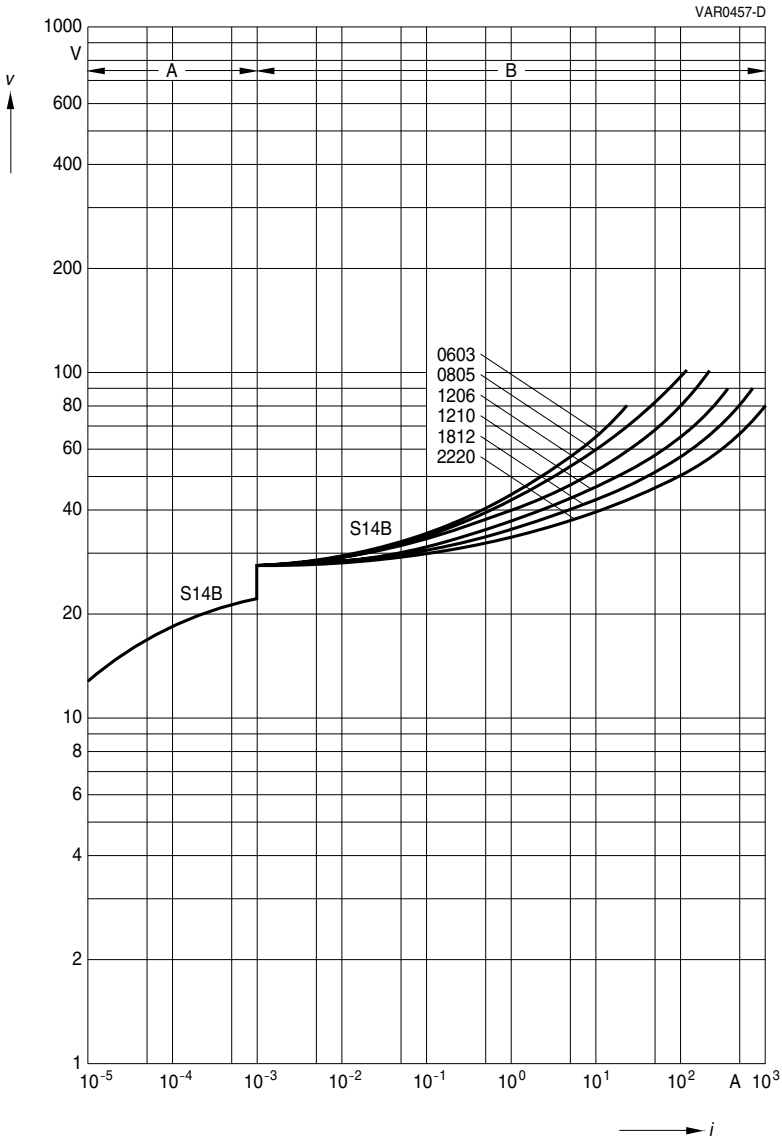

SIOV-CT/CN0603S14BAUTOG ... 2220S14BAUTOG
 SHCV-SR1S14B ... X/Z \triangleq 1812


SIOV-CN2220S14BAUTOE2G2
 SHCV-SR2S14B ... X/Z \triangleq 2220

VII Characteristics


$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

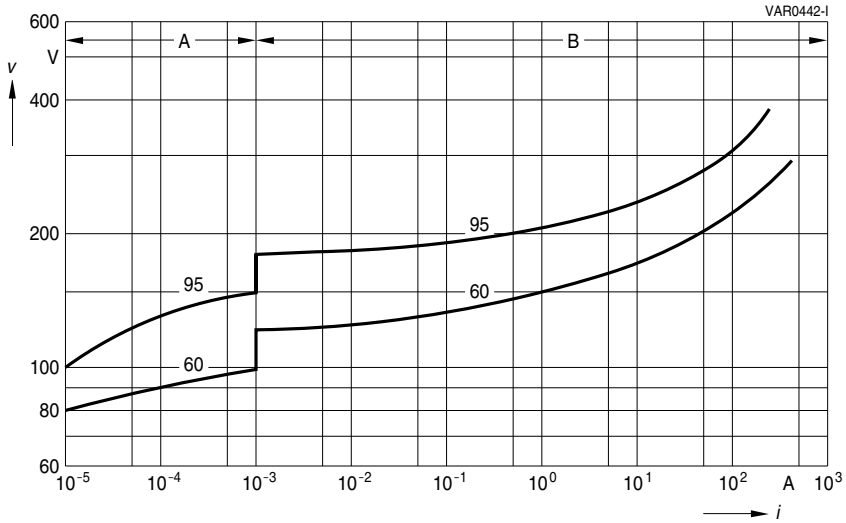

SIOV-CT/CN1812S60AG2 ... S95AG2

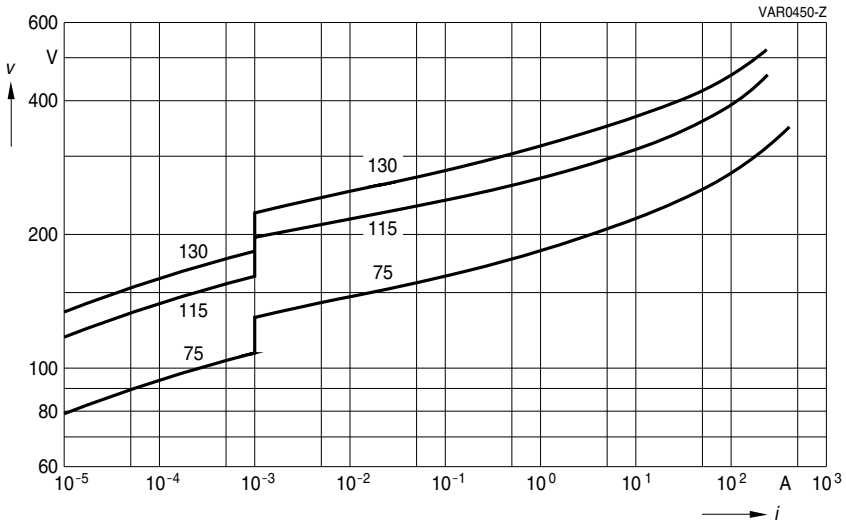


SIOV-CT/CN1812K75G2 ... K130G2

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

VAR0458-L

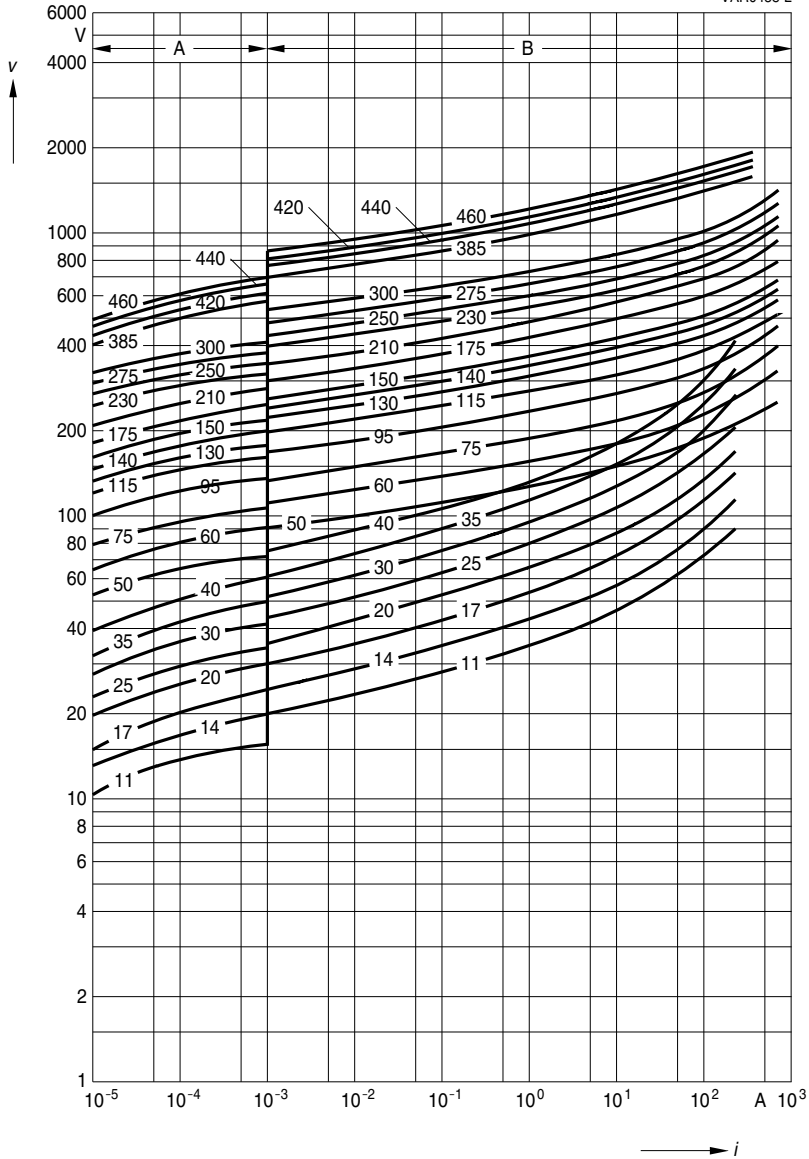

SIOV-S05 ... (E2)


SIOV-CU3225 ... (AUTO)G2

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

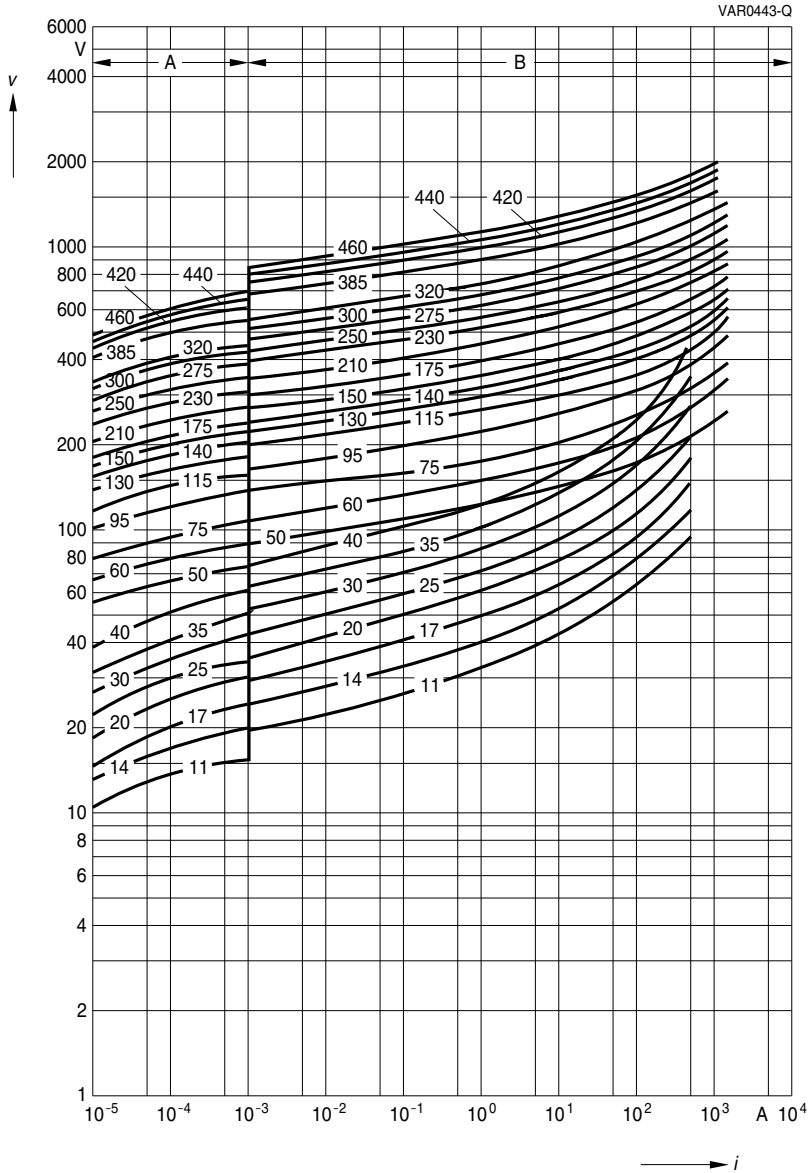

SIOV-S07 ... (D1)(E2)

SIOV-CU4032 ... (AUTO)G2


VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

VAR0451-H

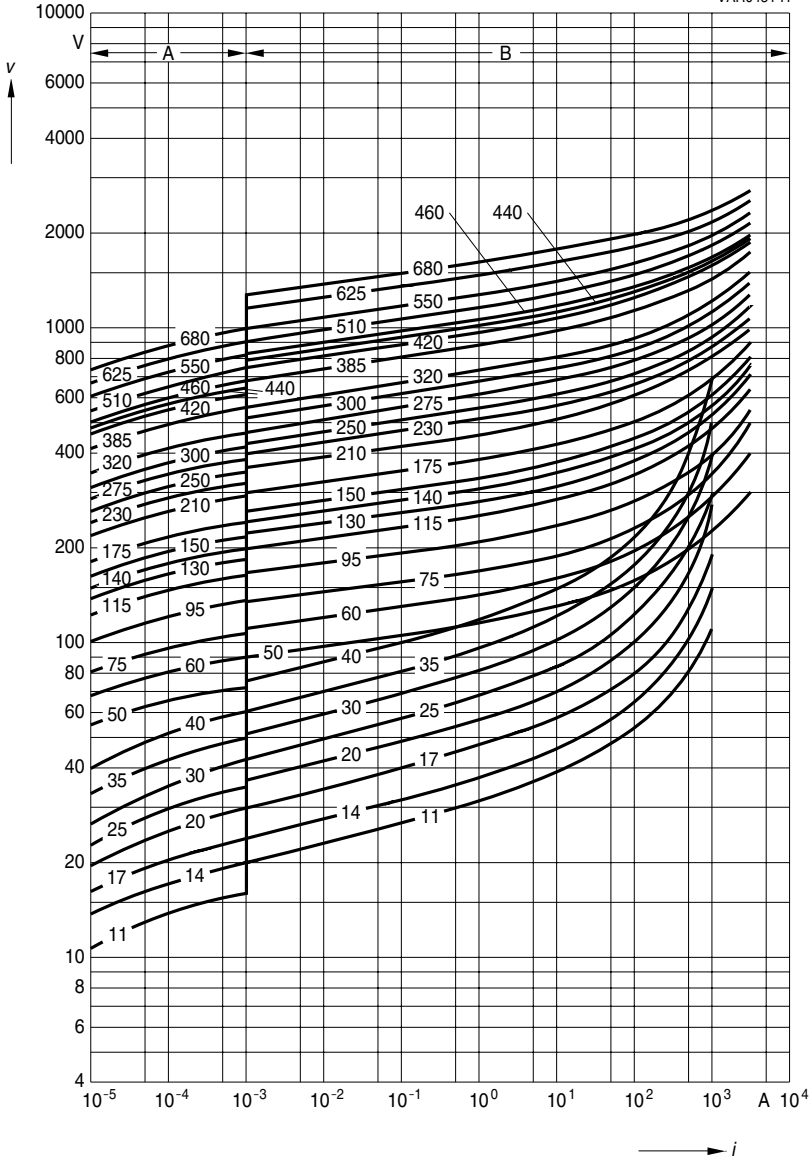


SIOV-S10 ... (AUTO)(D1)(E2)

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

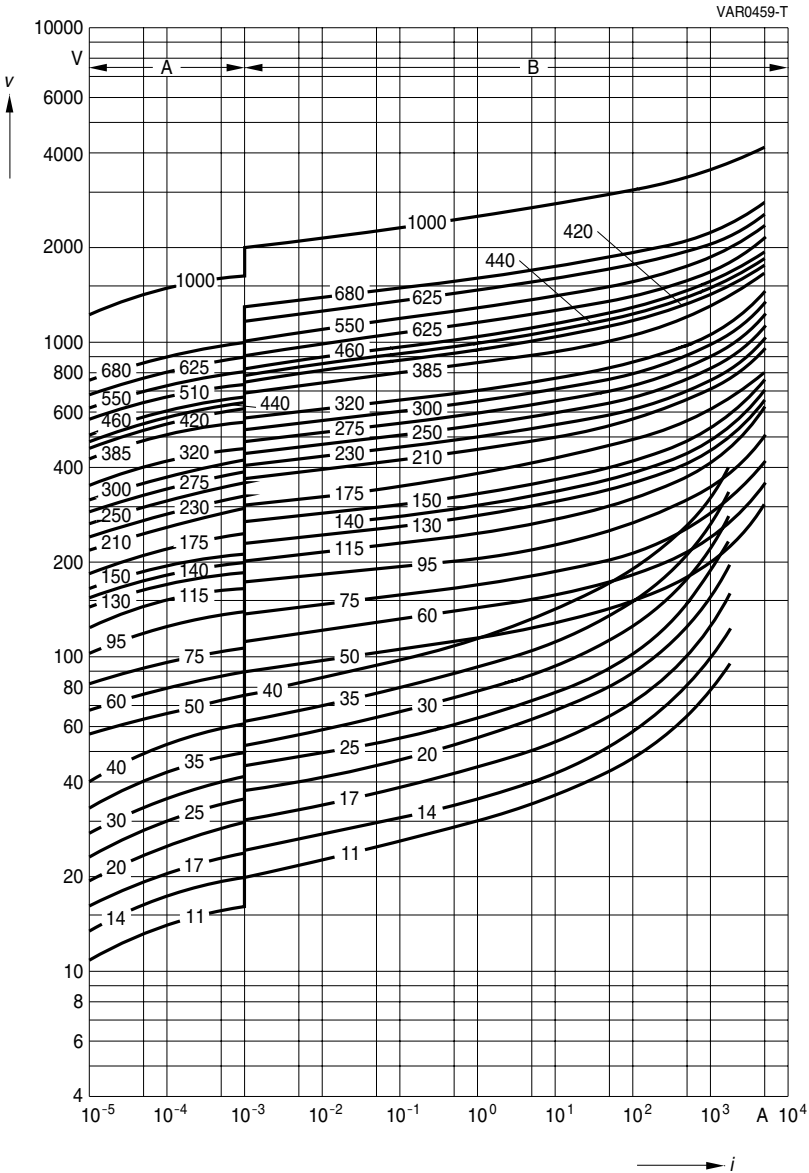


SIOV-S14 ... (AUTO)(D1)(E2)

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

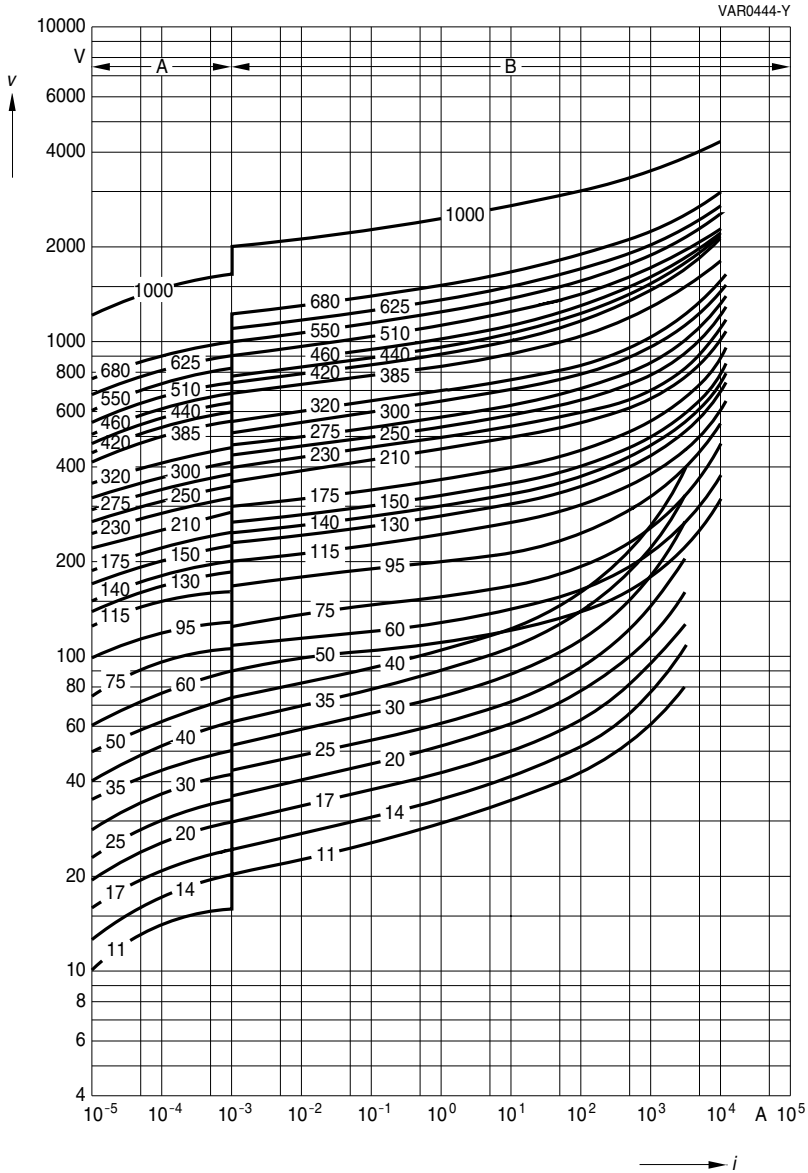


SIOV-S20 ... (AUTO)(E2)(E3)

VII Characteristics


$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current B = Protection level

} for worst-case varistor tolerances

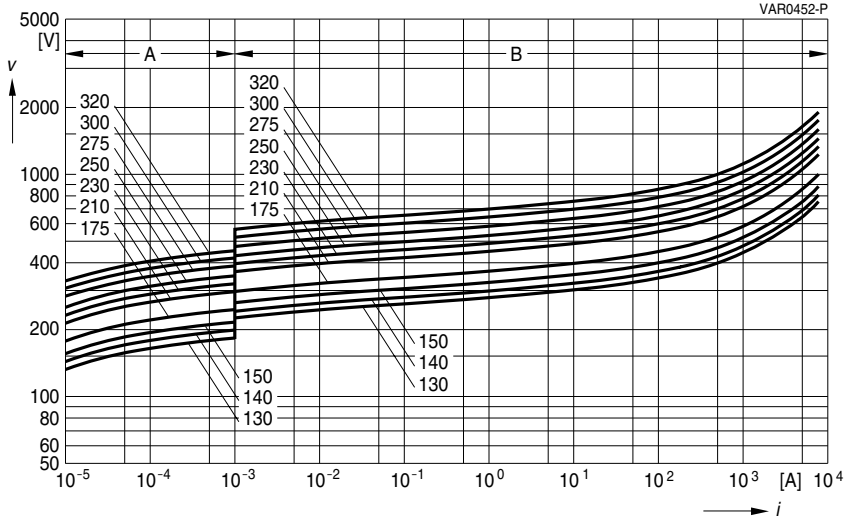

SIOV-Q14

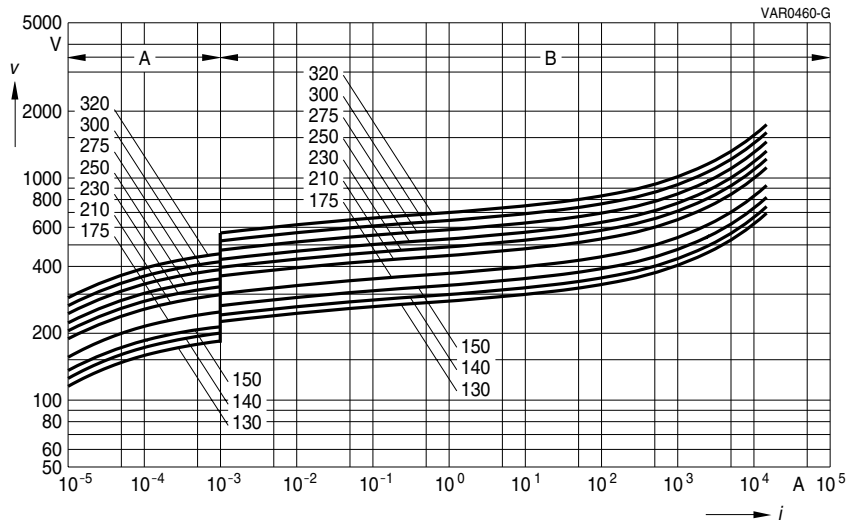


SIOV-Q20

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

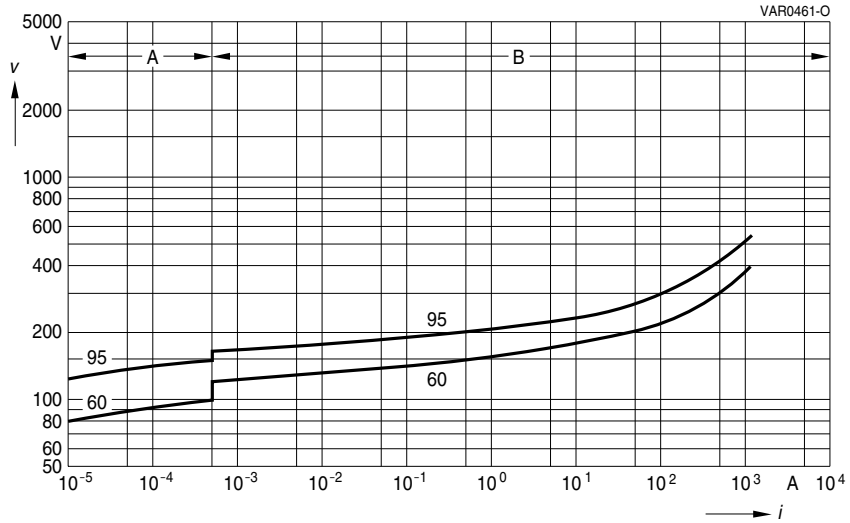


SIOV-S07S60A ... S95AG2
SIOV-CU4032S60A ... S95AG2

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

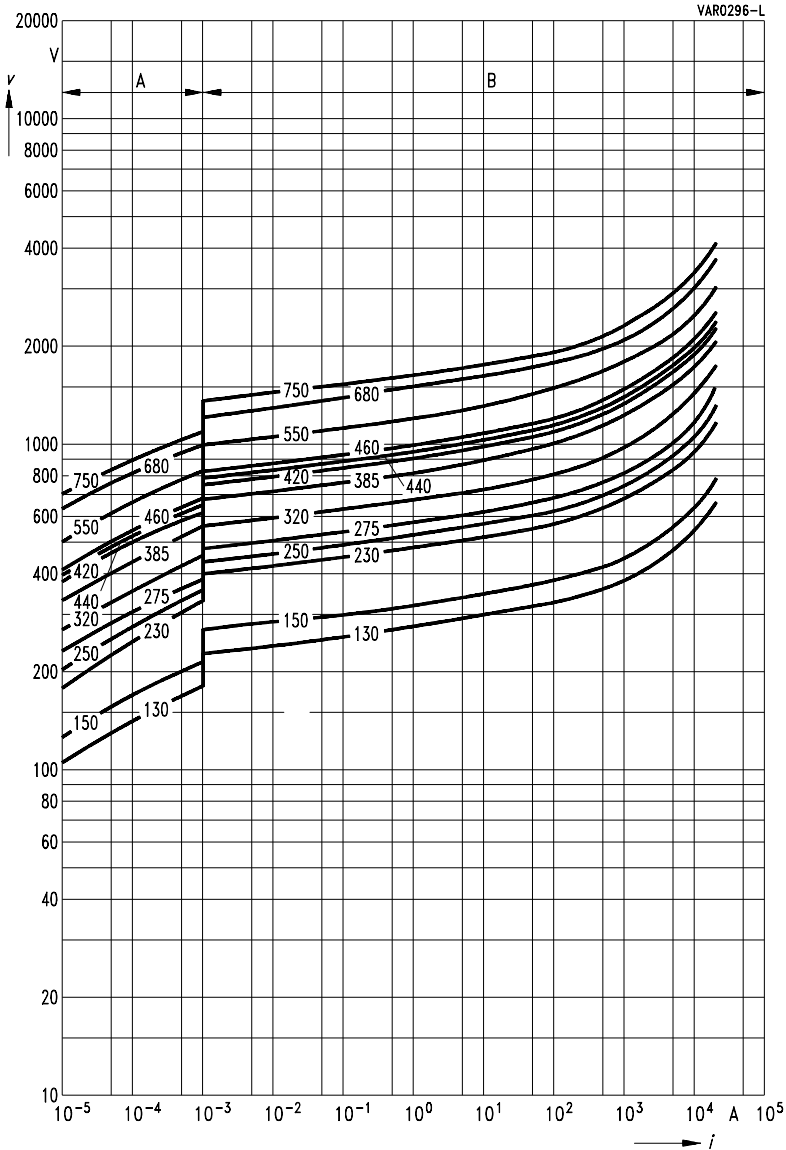


SIOV-B32K130 ... K750

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

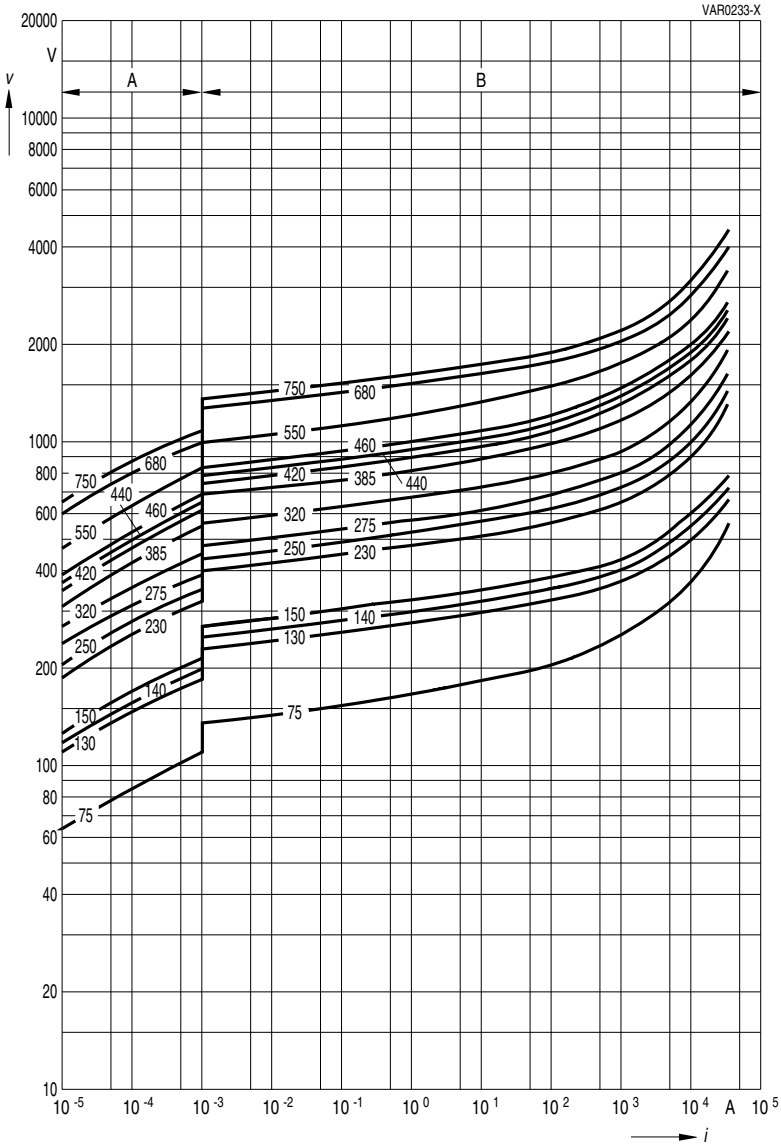

SIOV-B40K75 ... K750


SIOV-LS40K130QP ... K750QP(K2)

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

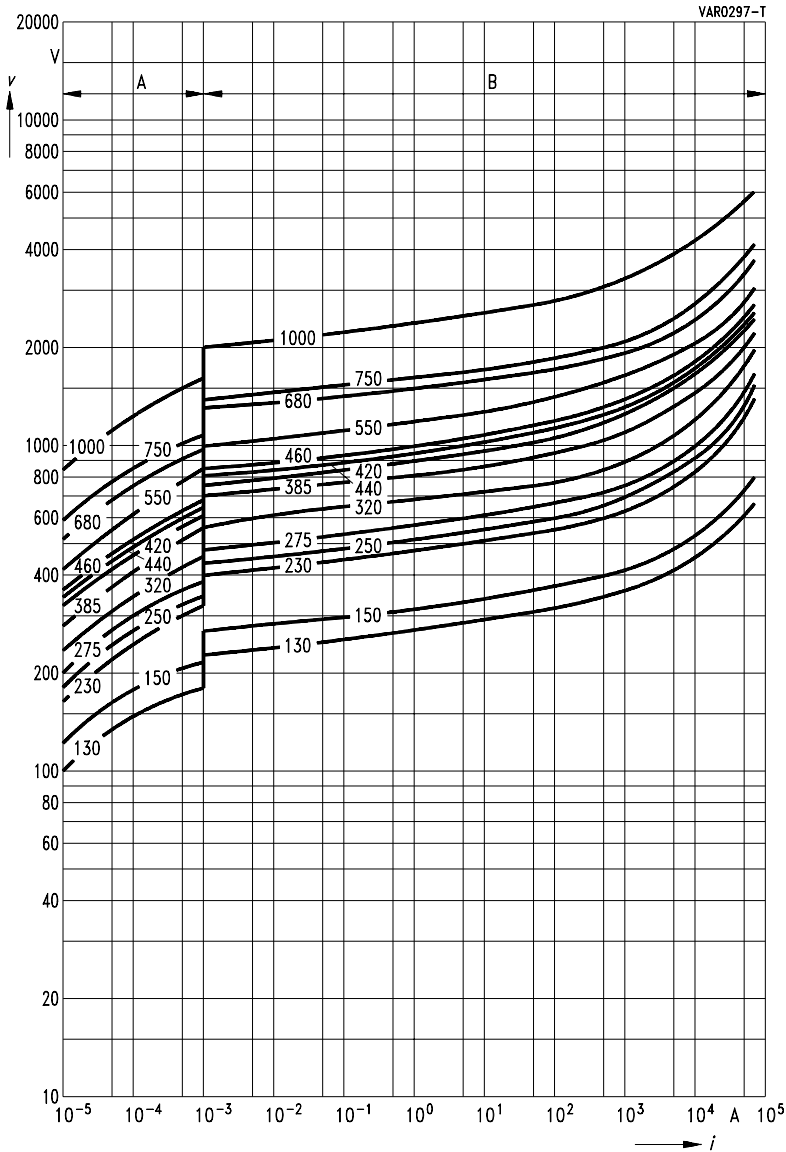


SIOV-B60K130 ... K1000

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

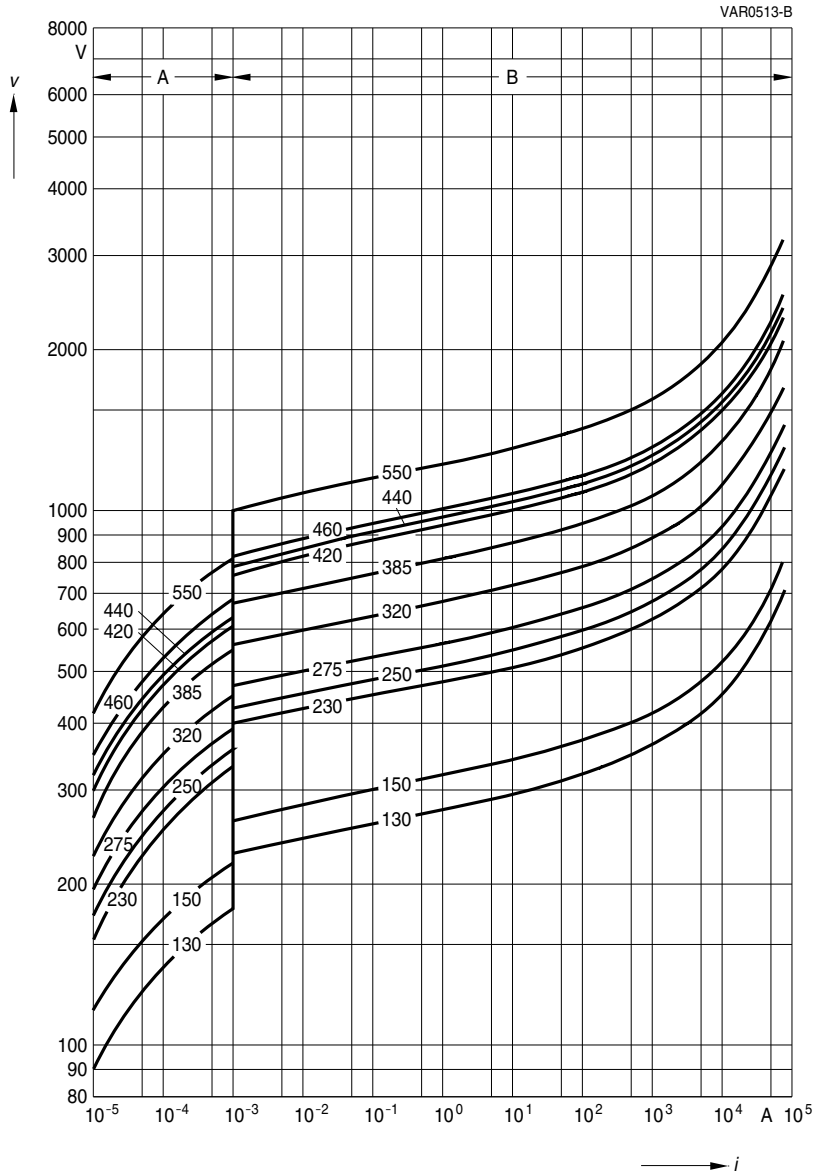

SIOV-LS50K130PK2 ... K550PK2


SIOV-LS50K130P ... K550P

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

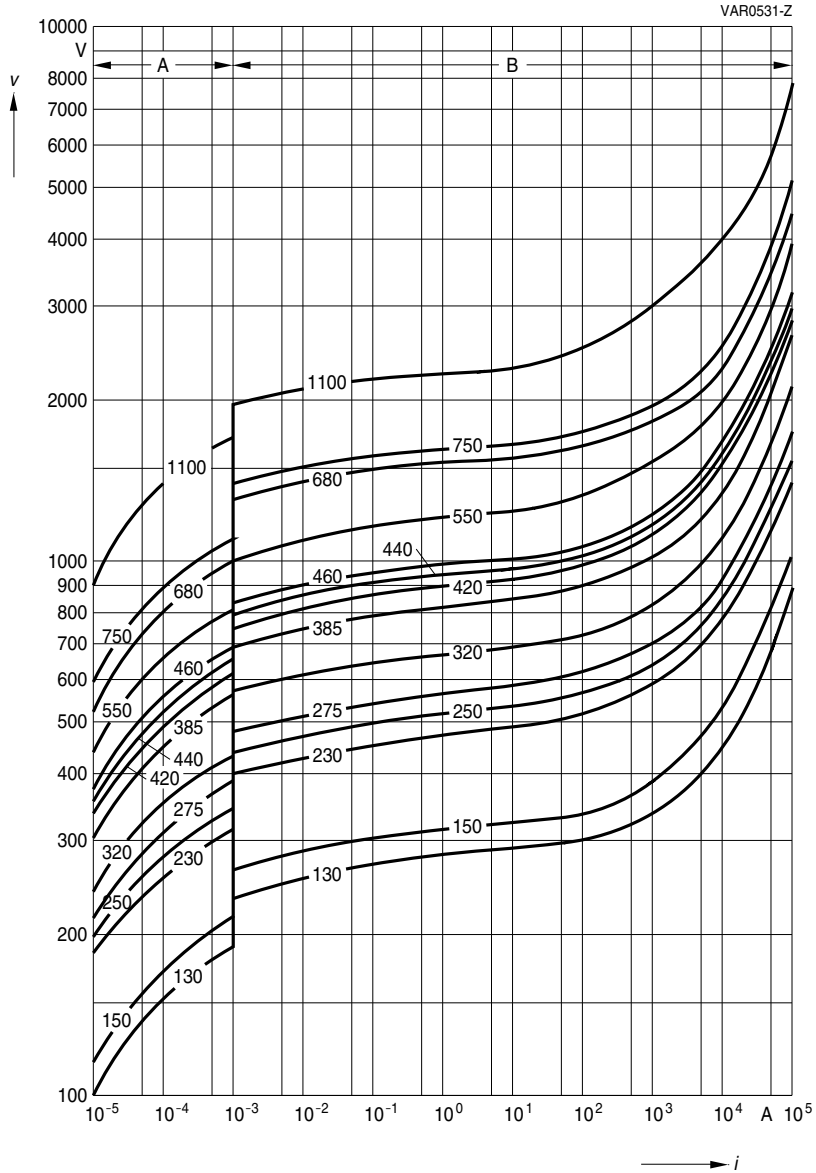


SIOV-B80K130 ... K1100

VII Characteristics

$v = f(i)$ – for explanation of the characteristics refer to “General Technical Information”, 1.6.3

A = Leakage current
 B = Protection level

for worst-case varistor tolerances

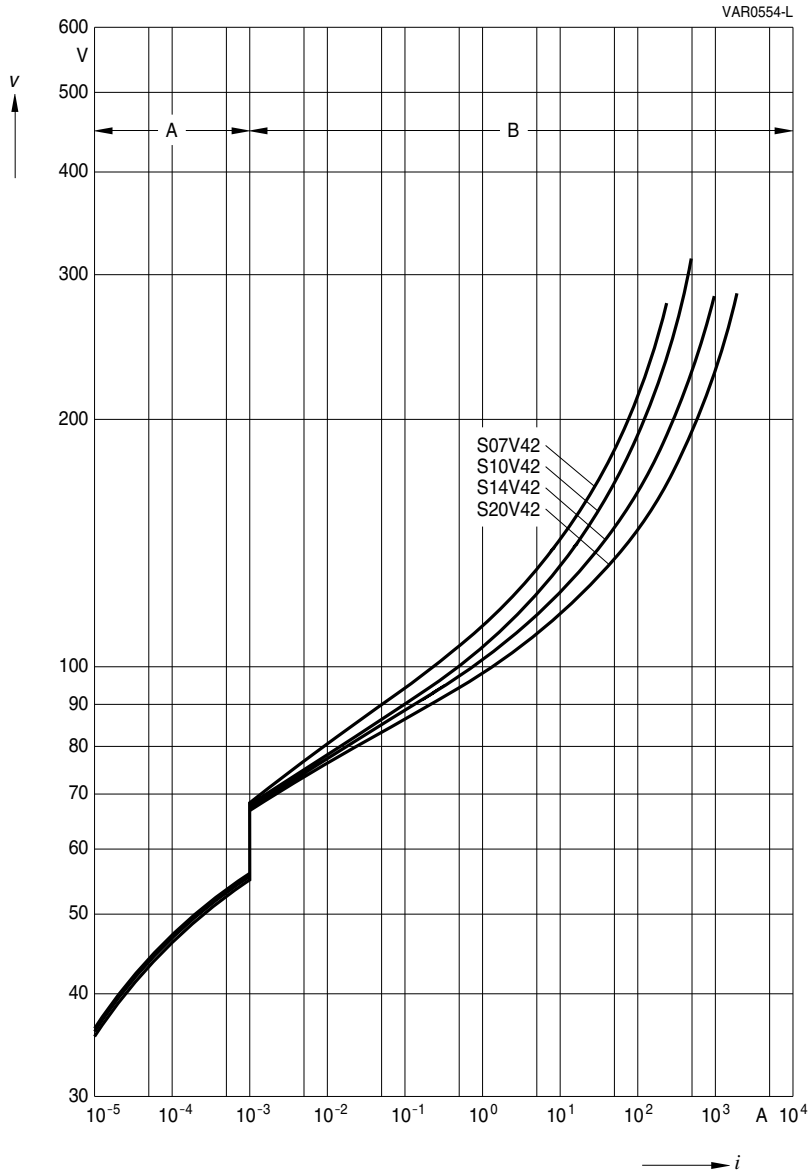

SIOV-S07V42AUTOS2D1

SIOV-S10 (-S14) (-S20) V42AUTOS5D1

Herausgegeben von EPCOS AG

Unternehmenskommunikation, Postfach 80 17 09, 81617 München, DEUTSCHLAND

☎ ++49 89 636 09, FAX (0 89) 636-2 26 89

© EPCOS AG 2002. Vervielfältigung, Veröffentlichung, Verbreitung und Verwertung dieser Broschüre und ihres Inhalts ohne ausdrückliche Genehmigung der EPCOS AG nicht gestattet.

Bestellungen unterliegen den vom ZVEI empfohlenen Allgemeinen Lieferbedingungen für Erzeugnisse und Leistungen der Elektroindustrie, soweit nichts anderes vereinbart wird.

Diese Broschüre ersetzt die vorige Ausgabe.

Fragen über Technik, Preise und Liefermöglichkeiten richten Sie bitte an den Ihnen nächstgelegenen Vertrieb der EPCOS AG oder an unsere Vertriebsgesellschaften im Ausland. Bauelemente können aufgrund technischer Erfordernisse Gefahrstoffe enthalten. Auskünfte darüber bitten wir unter Angabe des betreffenden Typs ebenfalls über die zuständige Vertriebsgesellschaft einzuholen.

Published by EPCOS AG

Corporate Communications, P.O. Box 80 17 09, 81617 Munich, GERMANY

☎ ++49 89 636 09, FAX (0 89) 636-2 26 89

© EPCOS AG 2002. Reproduction, publication and dissemination of this brochure and the information contained therein without EPCOS' prior express consent is prohibited.

Purchase orders are subject to the General Conditions for the Supply of Products and Services of the Electrical and Electronics Industry recommended by the ZVEI (German Electrical and Electronic Manufacturers' Association), unless otherwise agreed.

This brochure replaces the previous edition.

For questions on technology, prices and delivery please contact the Sales Offices of EPCOS AG or the international Representatives.

Due to technical requirements components may contain dangerous substances. For information on the type in question please also contact one of our Sales Offices.